

# Combined Front Fascia for Can-Am Outlander 570

SAUTV5

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Front Fascia* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## PRODUCT



## INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble the front fascia parts by using the provided self-tapping screws.



3. Remove original front fascia.



# Combined Front Fascia for Can-Am Outlander 570

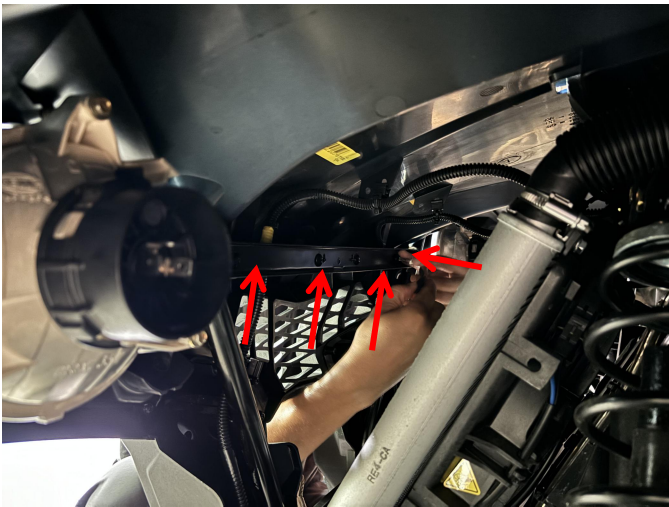

the original screws (Connect the wiring harness plug-in of the headlight first when installing).



5. The installation is complete.



4. Remove the headlights and reinstall them on the new front fascia, and secure with the original screws. Then attach the matching U-nuts to the new front fascia. Finally, install the new front fascia on the vehicle and fix it with



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.