

# Aluminum Hard Roof Top for CFMOTO ZFORCE 950

ZP-YJ-031207-001


## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Aluminum Hard Roof Top* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble part 1, part 2 and part 3 with ten M6\*30 inner hexagon screws, ten M6 flat pads and ten M6 rubber pads. As pictures show:

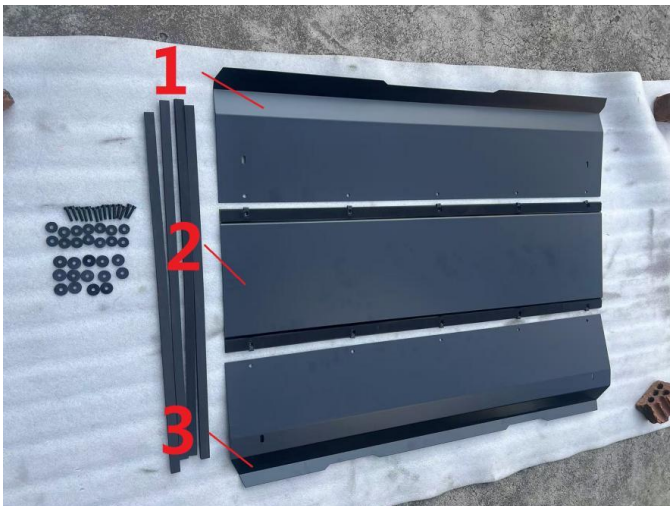

3. Stick foam strips around the top of the frame.



4. Install four M6 U-shaped clips on the top four corners of the frame, as shown in the figure:



# Aluminum Hard Roof Top for CFMOTO ZFORCE 950

ZP-YJ-031207-001

5. Use four M6\*30 inner hexagon screws, four M6 flat pads and four rubber pads to fix the roof top on the four U-shaped clips at the top corner and tighten them.



6. The installation is complete.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.