

# Combined Front Fascia For Can-Am Outlander 1000R

ZP-YJ-030603-184

SAUTVS®

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Combined Front Fascia* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## PRODUCT



## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble the front fascia using M3\*14 self-tapping screws. As the pictures show:



3. Unscrew the fixing screws of the dash protective cover and lift it. Then remove the front electrical box cover, the original front fascia, and the tow rope winch. As the pictures show:





# Combined Front Fascia For Can-Am Outlander 1000R


ZP-YJ-030603-184

SAUTV5



4. Remove the headlights from the old front fascia and reinstall them on the new front fascia. After the headlights are assembled, the new front fascia can be installed on the vehicle and fixed with the original screws (Install and fix in the original disassembly way). As shown in the figures:

5. Finally, assemble the winch and other accessories removed before. As the pictures show:

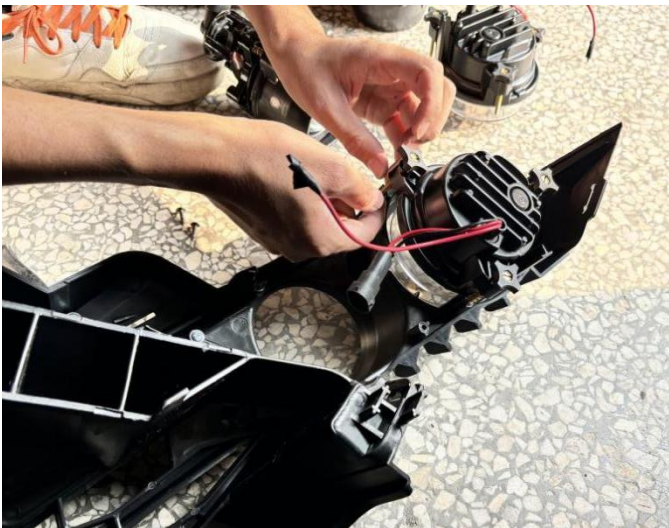



# Combined Front Fascia For Can-Am Outlander 1000R

ZP-YJ-030603-184

SAUTV5



6. The installation is complete.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.