

Bed Enclosure for CFMOTO ZForce 950

ZP-YJ-031203-007

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.


This *Bed Enclosure* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Combine part 1, part 2, part 3 and four parts 4 with eight M6*30 hex screws and eight M6 lock nuts. The large hole side of the tube is where the screw is inserted.



3. Remove the original three screws of the rear frame as shown in the picture, and the removed screw in the middle need to be reserved for use.

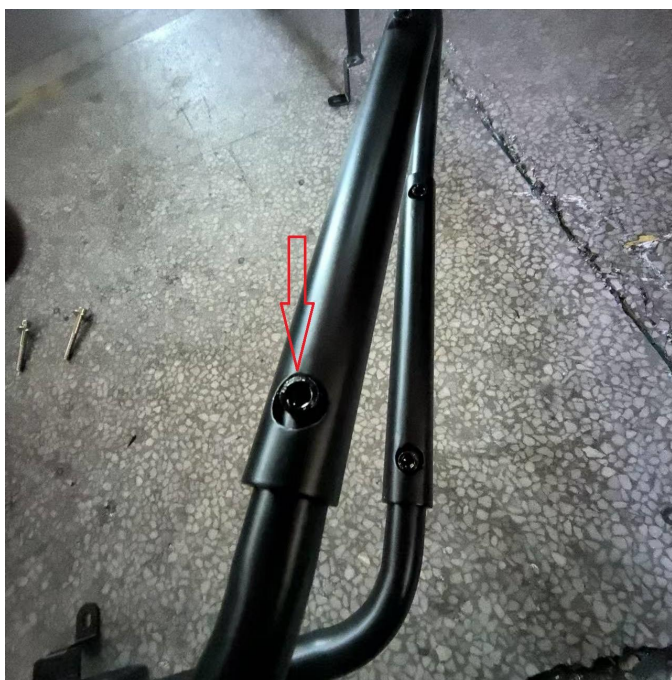

Bed Enclosure for CFMOTO ZForce 950

ZP-YJ-031203-007



4. Install the bed enclosure to three positions of the frame with two M8*70 flange outer hex screws and one screw removed from the middle. Then tighten all screws and complete the installation.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.