

Hood Scoop with Mesh Grill for Can-Am Maverick X3

SAUTV⁵

ZP-YJ-030603-189

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This HOOD SCOOP WITH MESH GRILL KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.

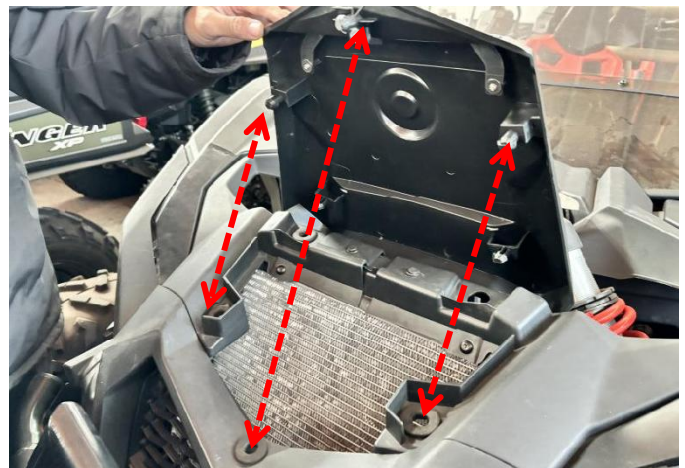

3. Simply remove the original hood from the vehicle and replace it with a new one.

Note: When installing the hood, the ball studs on the back of the hood need to be seated in the round rubber parts on the vehicle.



4. Installation completed.

