

Hood Scoop with Spotlight for Can-Am Maverick X3

SAUTVS®

ZP-YJ-030603-190

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT



This HOOD SCOOP WITH LED SPOTLIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. First remove the original hood of the vehicle, and then prepare the product supporting the adapter cable, the adapter cable end of the connector and the hood lights on the harness for connection, and then pull the adapter cable through the vehicle gap to the vehicle headlights, the headlight harness plug-in disconnect, and extend over the adapter cable for connection.

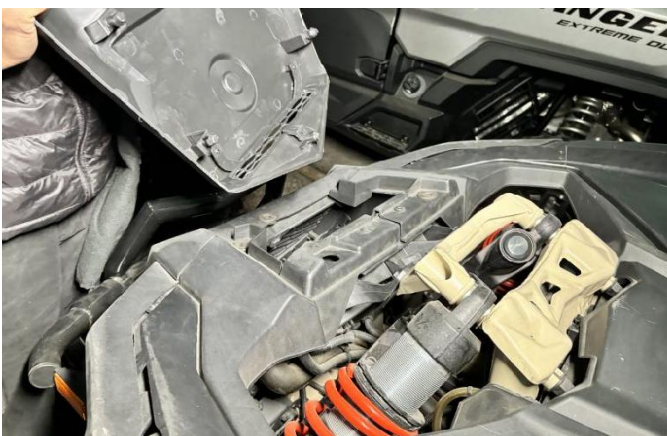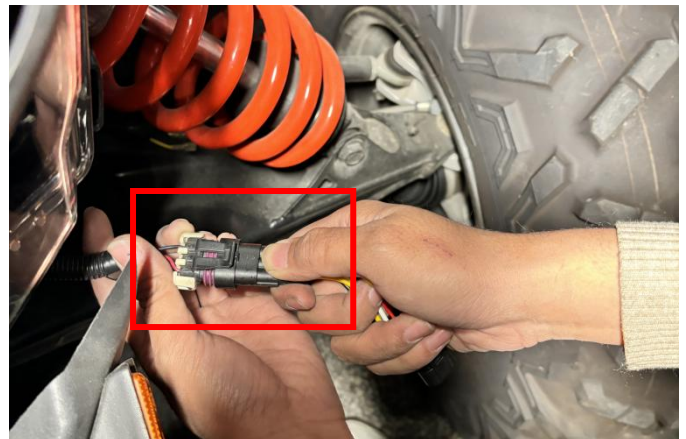

Hood Scoop with Spotlight for Can-Am Maverick X3

SAUTV5

ZP-YJ-030603-190

4. Installation completed.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.