

Sport Hard Roof for Can-Am Maverick R

ZP-YJ-030607-008

SAUTVS®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This SPORT HARD ROOF KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.






3. Take out the adhesive sponge strip in the kit, remove the adhesive backing and stick it in the sealing strip groove of the roof connection, then use the supporting self-tapping screws to fix the two pieces of the roof for the combination of the first and last ends of the junction with reference to the marking of the point to use the M6 drill for drilling, and then finally use the M6 * 16 socket head cap screws and matching nuts and flat pads for reinforcement.

Sport Hard Roof for Can-Am Maverick R

ZP-YJ-030607-008

SAUTVS®

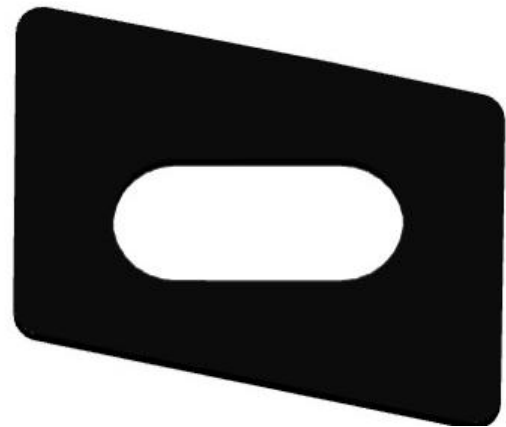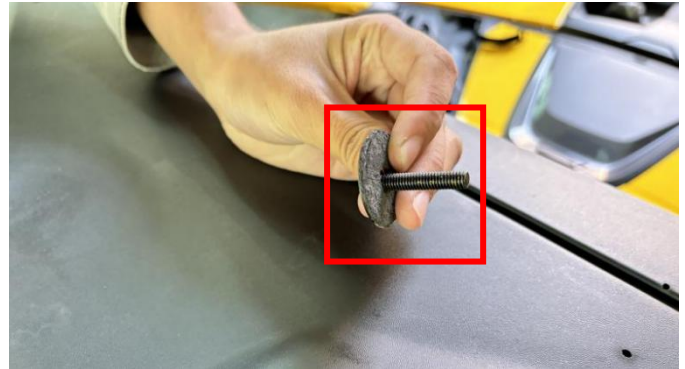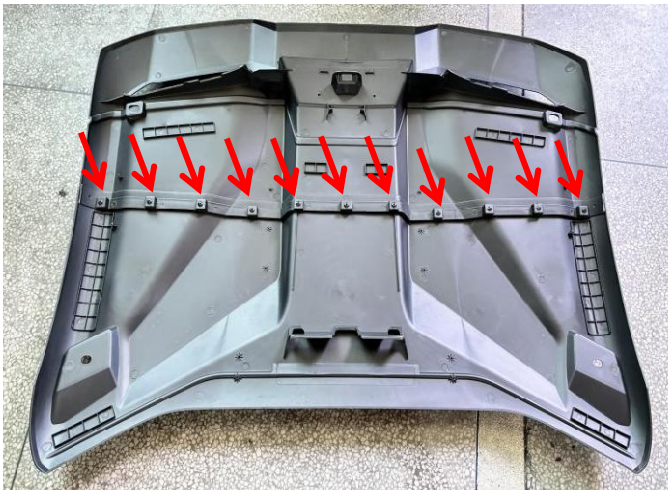

4. The assembled roof will be mounted on the vehicle, the front end of the roof using hexagonal M6 * 25 screws and nuts for fixing (screws need to be set on the matching sponge gaskets and flat pads before use), the rear end of the roof need to use the special iron pressure plate and hexagonal M8 * 25 screws and flat pads for fixing the nuts.



Sport Hard Roof for Can-Am Maverick R

ZP-YJ-030607-008


SAUTV5



5. Finally, use nylon straps to pass through the roof mounting holes (both front and rear need to be secured with straps) and wrap around the crossbar for reinforcement.



6. Installation completed.

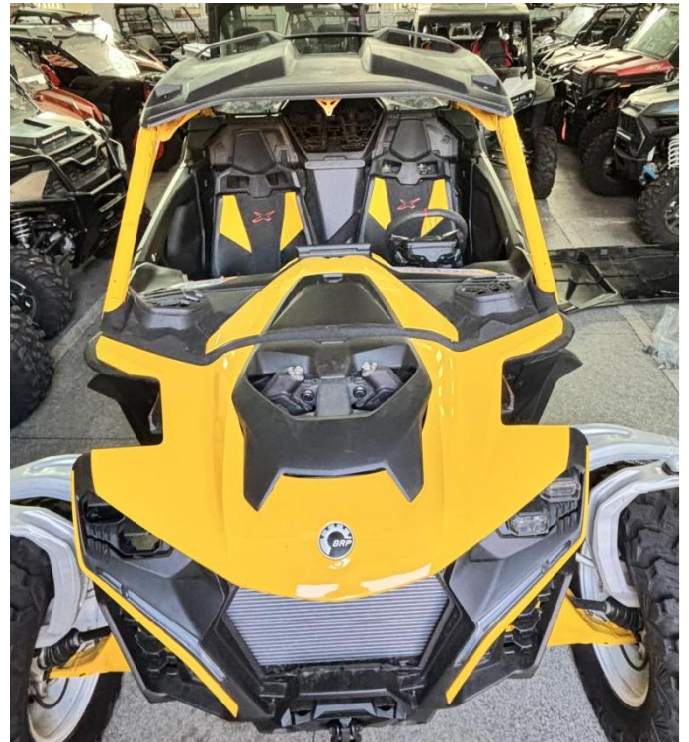

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.