

Turbo Hood Scoop with LED Spotlight for Polaris RZR XP 1000 / XP 4 1000 2024+



ZP-YJ-030503-174

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Turbo Hood Scoop with LED Spotlight* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture




1. First remove the original hood scoop, and then prepare the conversion cable in the product, connect the connector at the end of the extension cable with the wiring harness on the hood light, and then pull the conversion cable through the gap of the vehicle to the headlight of the original vehicle, and disconnect the wiring harness plug-ins of the original headlight, and re-connect the extension of the spotlight conversion cable. As the picture shows:



Turbo Hood Scoop with LED Spotlight for Polaris RZR XP 1000 / XP 4 1000 2024+



ZP-YJ-030503-174

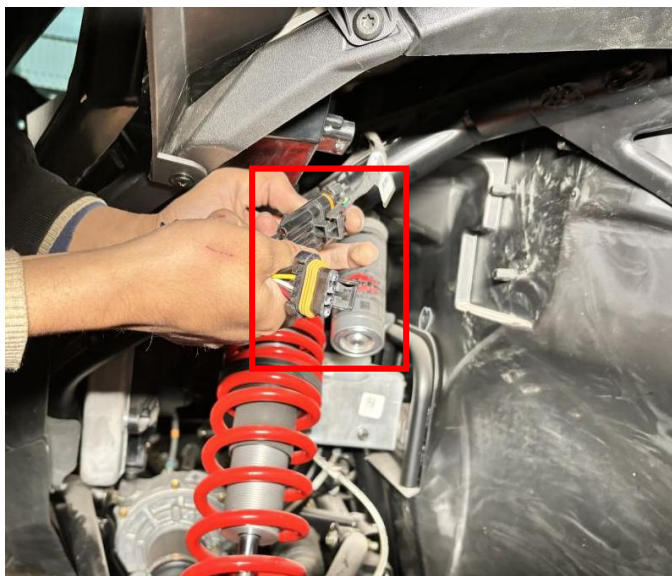

2. Finally, fix the hood with the original screws. As the picture shows:

Note: The two limit brackets need to be stuck into the notches of the original vehicle during installation.

3. The installation is complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.