

Turbo Hood Scoop with Mesh for Polaris RZR XP 1000 / XP 4 1000 2024+



ZP-YJ-030503-175

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Turbo Hood Scoop with Mesh* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture



1. First remove the original hood scoop, and then replace it with the new hood, and fix it with the original screws. As the picture shows:

Note: The two limit brackets need to be stuck into the notches of the original vehicle during installation.

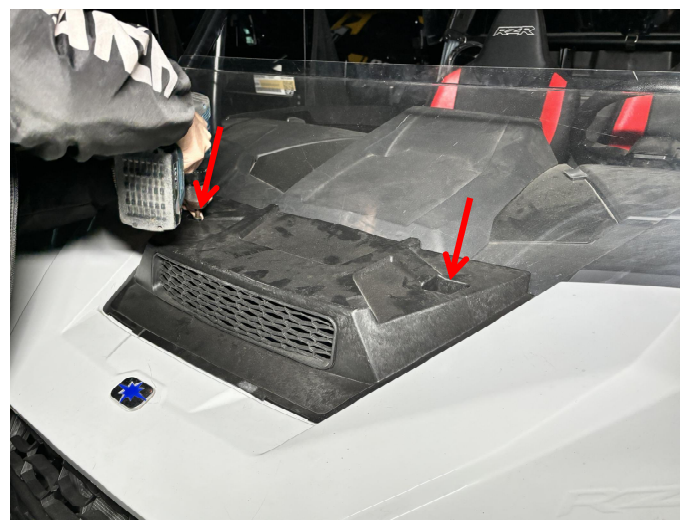

2. The installation is complete.

Turbo Hood Scoop with Mesh for Polaris RZR XP 1000 / XP 4 1000 2024+



ZP-YJ-030503-175



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.