

Rear Cargo Door Panel for Polaris Ranger 900 Full Size



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This *Rear Cargo Door Panel Kit* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture and accessories





1. First unscrew the surface of the rear cargo door, then open the cargo door and unscrew the fixing screws on the back of the door. As the picture shows:



2. Remove the outer door panel, remove the limit rods and locks on both sides of the door panel, and move them to the new door panel. As the picture shows:

Note: When installing the limit rods, the bend Angle at the fixed point should face downward.

Rear Cargo Door Panel for Polaris Ranger 900 Full Size

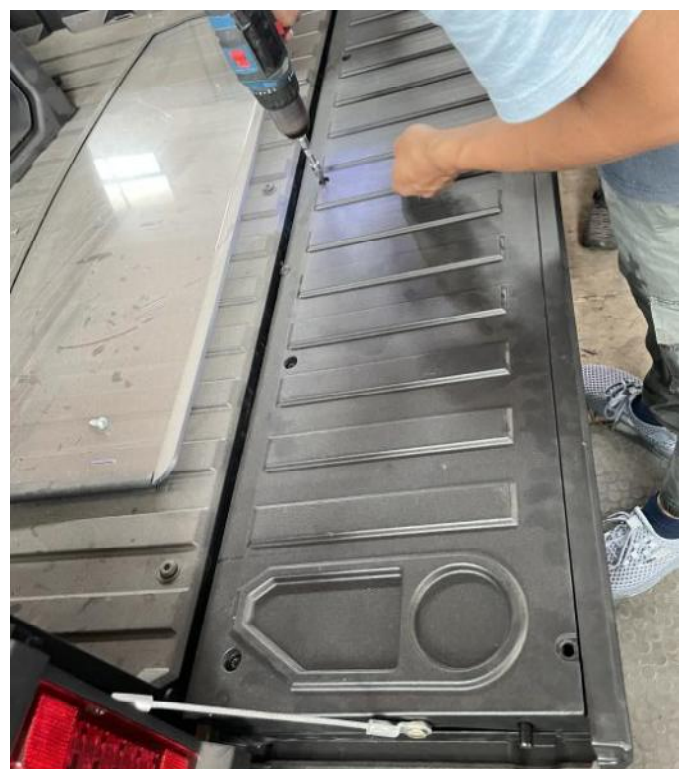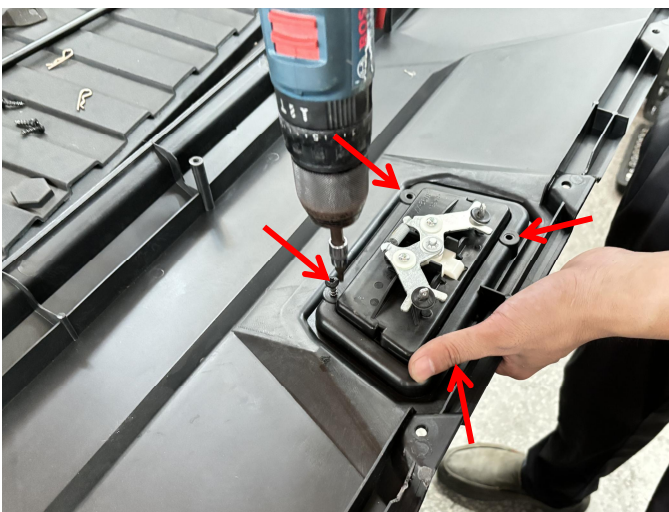

3. Insert the two limit pull rods into the fixing holes at the two ends of the door panel, install the door panel, secure it with the original screws, and then reinstall the screws on the inner door panel. As the picture shows:

Rear Cargo Door Panel for Polaris Ranger 900 Full Size



4. The installation is complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.